### **SAFETY PRECAUTIONS**

- 1. The device must be installed by a qualified person,
- Disconnect all power before working on the device. Don't touch any terminal when the power is ON.
- 3. Verify correct terminal connection when wiring.
- 4. Don't dismantle or repair the device whether it operates normally, otherwise no responsibility is assumed by producer and seller.
- Never use the device at the site which can be invaded by corrode gas, strong sunshine light and rain.
- 6. Clean the device with a dry cloth.
- 7. Fail to follow these instructions will result in serious injury or death.

### **FEATURES**

- WIFI control.
- Double 3 digit display for voltage, current, leakage current and kWh power etc.
- Protect electrical device against over/under voltage, over current and earth leakage faults
- Parameters setting by keys.
- 1-63A adjustable.
- 2 Module, DIN Rail mounting.

TECHNICAL DATA	
Poted cupply voltage	40.000/
Rated supply voltage	AC 220V
Operation voltage range	AC 50V~350V
Rated frequency	50/60Hz
Overvoltage(U>) setting range	220~300V
Undervoltage(U<) setting range	120~210V
Overcurrent(I>) setting range	1~63A
Maximum operating current Imax	80A
Leakage current setting range	10mA~99mA
Power-on delay	Ton: 1s~300s
Recovery delay	Tr: 1s~500s
Overcurrent faults trip delay range	Ta: 1s~600s
Overvoltage(U>) trip delay	0.5s
Undervoltage(U<) trip delay	0.5s
Leakage current trip delay	<0.1s
Rated insulation voltage	350V
Output contact	1NO
Electricallife	10 <sup>4</sup>
Mechanical life	10 <sup>6</sup>
Protection degree	IP20
Pollution degree	3
Altitude	≤2000m
Operating temperature	-5°C~40°C
Humidity	≤50% at 40°C(without condensation)
Storage temperature	-25°C~55°C

<sup>\*</sup> Operating current value

### **Default setting**


Technical parameter	Setting range	Step	Factory setting
Overvoltage trip value	220V-300V	1V	250V
Undervoltage trip value	80V-210V	1V	170V
Overcurrent(I>) setting range	1-63A	1A	63A
Leakage current setting range	10mA-99mA	1mA	30mA
Power-on delay	1s-300s	1s	15s
Recovery delay	1s-600s	1s	90s
Overcurrent trip delay	1s-500s	1s	15s

# TR-PVAMWF

# **SMART VOLTAGE PROTECTOR**


Please read complete instructions prior to installation and operation of the device.

### FRONT-FACE PANEL

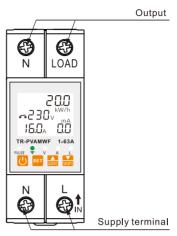

Symbol	Function	
PULSE	Energy meter activate	
• •	WIFI connection	
V	<u></u> U fault	
e A	>I fault	
e L	Leakage fault	

Buttons	Function
(U)	ON/OFF manually
SET	Menu setting
QUERY	Digit +/query
WIFI	Digit -/WIFI connection

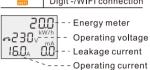


- 6. Output relay opens
- ு Output relay closes

Display of power on delay



 Operating voltage and delay time on display during the counting of start delay; they will be normally ON after the delay is over and the output relay closes.

# Switch on and off manually

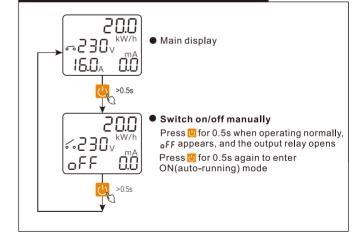







Long press for 3s to pair to the WIFI. Indicator 

§ flashes, the device is pairing

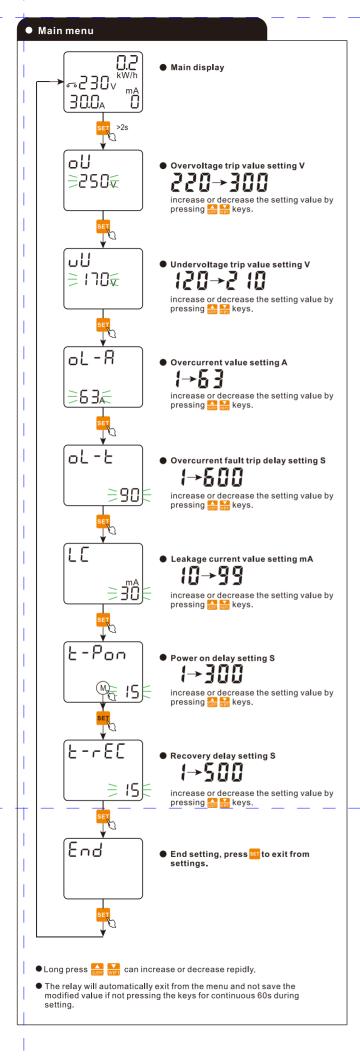


## • Inquiry of kWh power and power factor

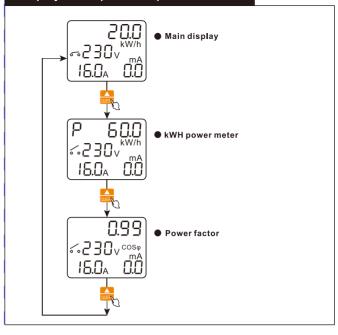

### **OPERATING INSTRUCTIONS**


- If a voltage fault was detected when power-on delay is counting, the output relay opens and faults indication symbol lights up.
- The output relay closes if there are no faults. If a fault was detected, the output relay opens and fault indicator lights up. Faults state and operating data will be transmitted to "Tuya" APP.
- The parameters can be set by both buttons and "Tuya" APP.

### **WIRING DIAGRAM**

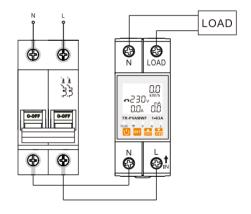

Rated operating current of circuit breaker is 75% maximum current of the relay le=0.75x lmax

### **DIMENSIONS**

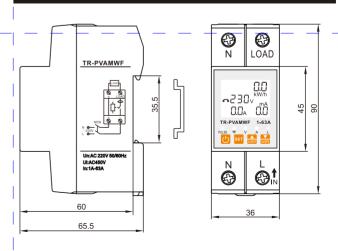



- Download App
   a. Scan the QR code and download App
   Use your phone to scan the QR code below to download App.
   b. Search "Smart Life" by Google Play with Android phone or App Store with Iphone.



2. Register/Login Account
Open the App and register an account.

3. Adding a new device

Press and hold ➡ for 3s

until ➡ light blinks fast.

(Open the WIFI and bluetooth of mobile phone)



4. Switch
Click to turn on or turn
off the device.



5. kWh power meter(expense)
Press 'prepayment switch' to
activate the function.

Initial password:0000



6. Time schedule Select "Schedule" to set the running time



# 6. Password and parameters setting Set the parameters as required.

